


BMT TURRET MASTER BAR

PRECISION TYPE

Regular inspection of machine turret is an extremely important step to realize high precision machining!

Material : SNCM420H

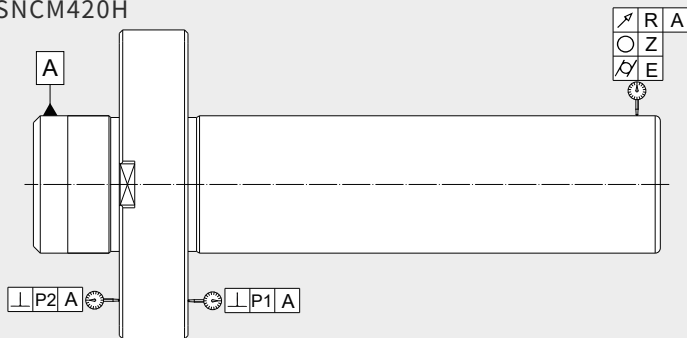


ROUNDNESS	1μm
SURFACE ROUGHNESS	Ra < 0.15μm
RUNOUT ACCURACY	3μm
CYLINDRICITY	5μm

100% GUARANTEED PRECISION:

Every BMT turret master bar is inspected with high precision instrument and delivered with an inspection report. 100% quality guaranteed !

Perthometer M1	
Object Name #	
Lt	5.600 mm
Ls Standard	2.5 μm
Lc	0.800 mm
Ra	0.110 μm
Rz	1.31 μm
Rmax	2.34 μm

SYIC Inspection Report		
COMMODITY : TYPE :		
Unit: μm		
ITEM EXAMINED	APPROVED TOLERANCE	TEST VALUE
P1	0.002	
P2	0.002	
R	0.003	
Z	0.001	
E	0.005	
Surface roughness	Ra < 0.4 μm	
Operator:		DATE:

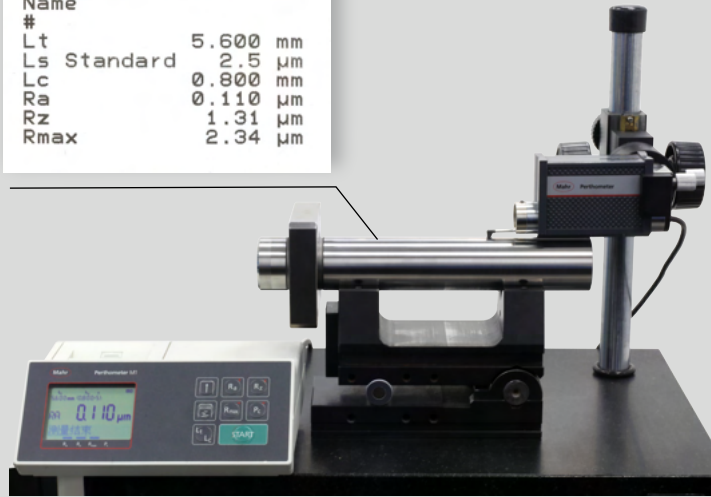

心源工業股份有限公司
SHIN-YAIN INDUSTRIAL CO., LTD.

436406 台中市清水區菁埔路198號
NO.198, Jingpu Rd., Qingshui Dist,
Taichung City 436406, Taiwan

Tel: +886-4-26237575
Fax: +886-4-26237676
E-mail: sales@syic.com



www.syic.com



What are the benefits of using BMT Turret Master Bar?

- 1 Optimal for checking machine turret accuracy.
- 2 Checking turret accuracy maximizes machining performance and increases productivity.
- 3 Ensures the machining precision and prolongs the tool life.
- 4 Helps detect potential problems of turret/ equipment and saves downtime and costly repair cost.



Machining Performance ↑

Tool Life ↑

Machining Productivity ↑

Recommendation of storage:

It's recommended to store in stock vertically to prevent deformation.
Every BMT turret master bar is delivered with an aluminum box for vertical storage.

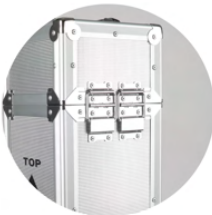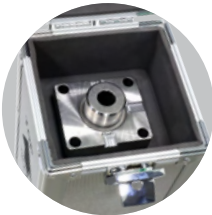

WATCH MORE



How to measure turret accuracy using BMT Turret Master Bar?

STEP 1




Clean the inner hole and end face of the turret with wiping paper.

STEP 2



Wipe down the interface of BMT turret master bar.

STEP 3

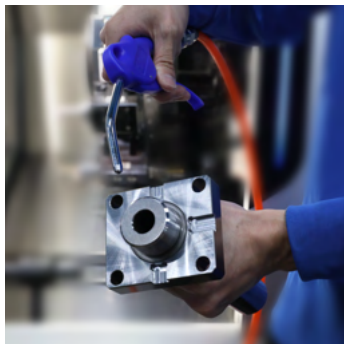

Use an air gun to blow the interface of the BMT turret master bar.

STEP 4



Mount the BMT turret master bar into the turret and tighten four screws with a L-shaped wrench.

STEP 5



Wipe down the straight shank.

STEP 6



Measure parallel accuracy of X-axis.

STEP 7



Measure vertical accuracy of X-axis.

STEP 8



Use an allen wrench to loosen the four screws of the BMT turret master bar.

